
INSTALLATION INSTRUCTIONS SRCF RECTANGULAR RECESSED LED CANOPY

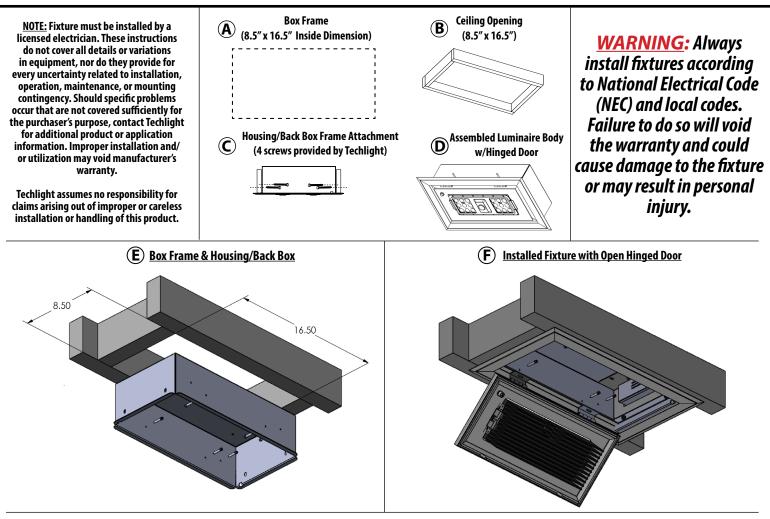

IMPORTANT: TURN ELECTRICITY OFF AT THE CIRCUIT BREAKER BEFORE INSTALLING FIXTURE.

The canopy consists of 2 separate parts (Housing/Back Box Frame Attachment (C) plus Luminaire w/Hinged Door (D)) for assembly and installation. This 4 step process is detailed below:

- 1st Secure the housing (C) into box frame (A,E) using 4 screws provided. Screw through "holes" on interior/long side(s) of housing/back box.
- 2nd Insert the main component/luminaire (D) into the secured housing. Open hinged door frame (F), with the 4 additional screws provided, attach luminaire through housing and into box frame. Use "holes" on the interior/short side(s) of luminaire body.

The luminaire is constructed with a hinged front cover (where LEDs and heat sink are located). This allows access to wiring components, behind, once secured/installed into the celling/box frame (E).

- 3rd With hinged door open (F) and housing PLUS luminaire secure, you may connect the incoming supply wires to the corresponding fixture leads using wire connectors.
- 4th The final step is to close the hinged door/lid of the fixture body and secure shut with additional two captive screws in door frame. This allows access to the wiring components in the future if necessary maintenance is needed.

